 



BLOOMIN8

Colour E-Ink Canvas



1. What's In The Box?

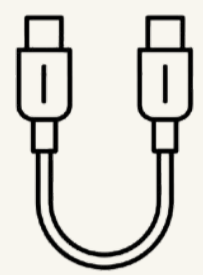

 Type-C cable

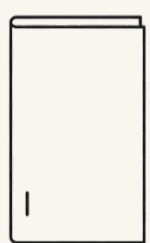

User manual

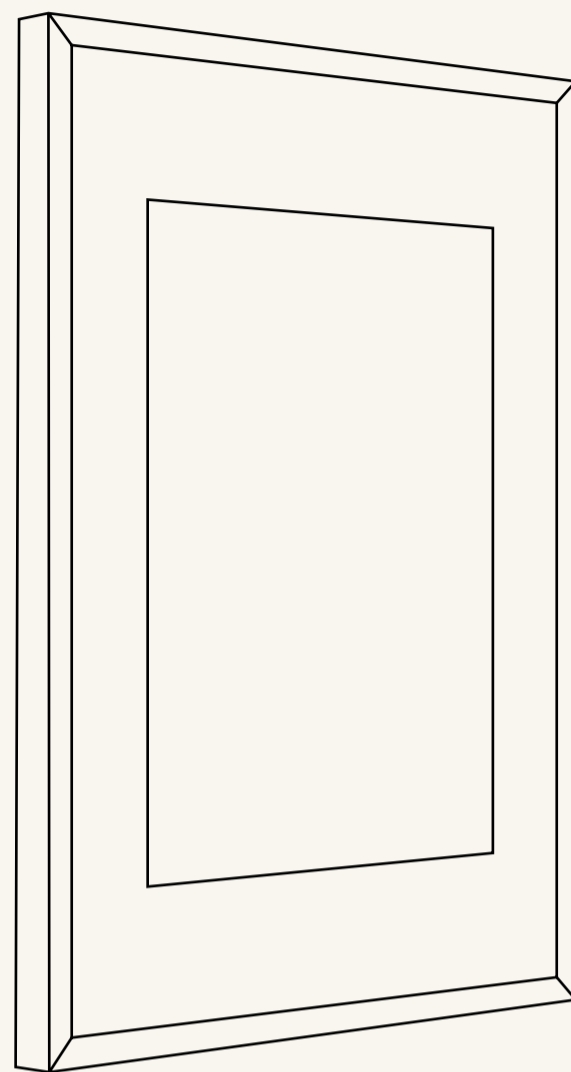  

Screw × 2





Wall plug × 2

Colour E-Ink Canvas
13.3"

2. Specification

Size	13.3"
Display	E Ink Spectra 6
Resolution	1200 × 1600
PPI	150
Operating Temperature Range	0°C - 50°C
Battery Capacity	10,000 mAh
Charging	USB-C
Wi-Fi	2.4 GHz
Bluetooth	BT 5.1 LE
Frame Material	Aluminium

  
3. Overview

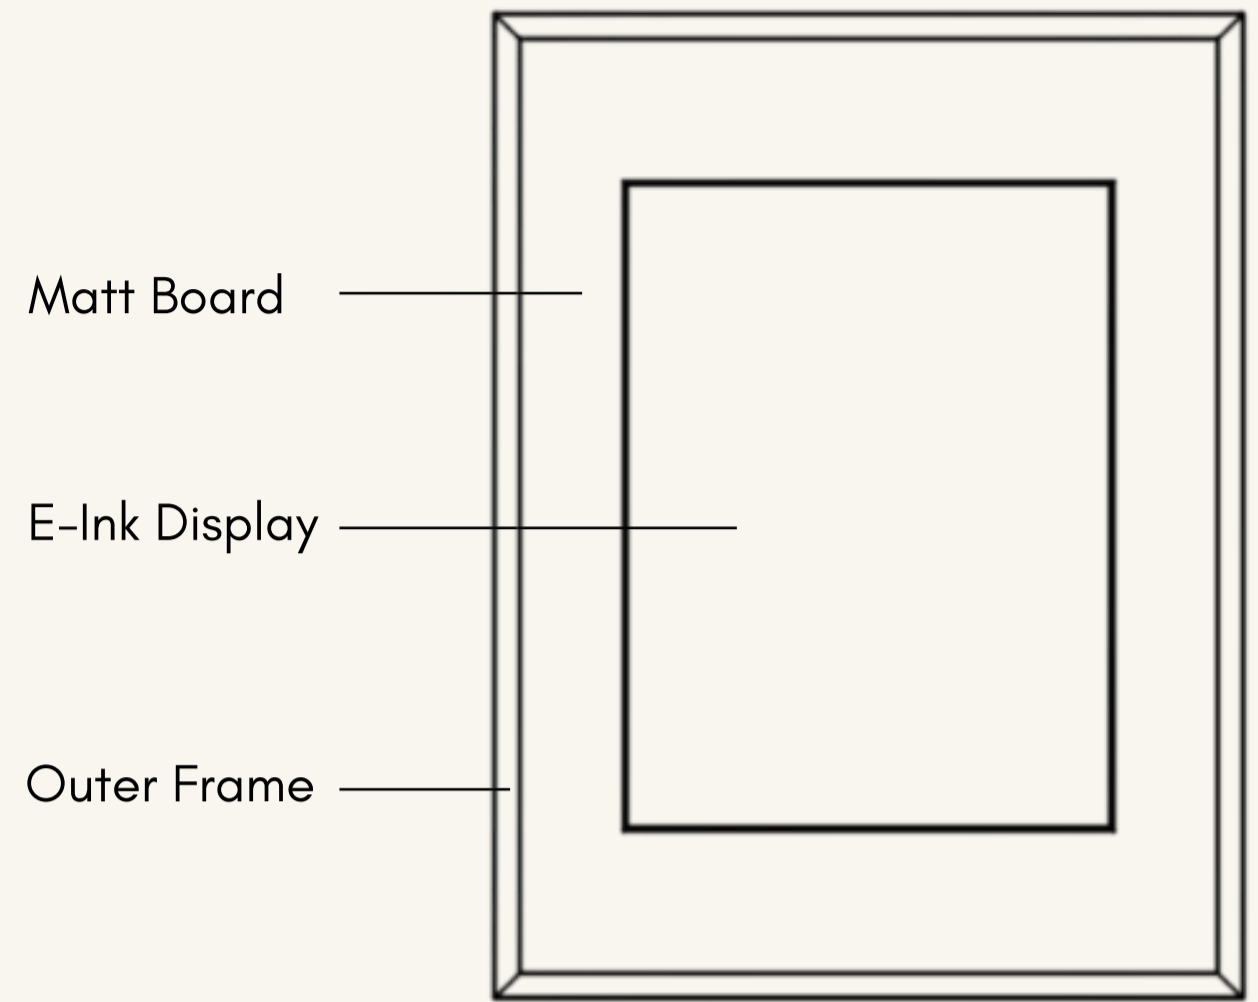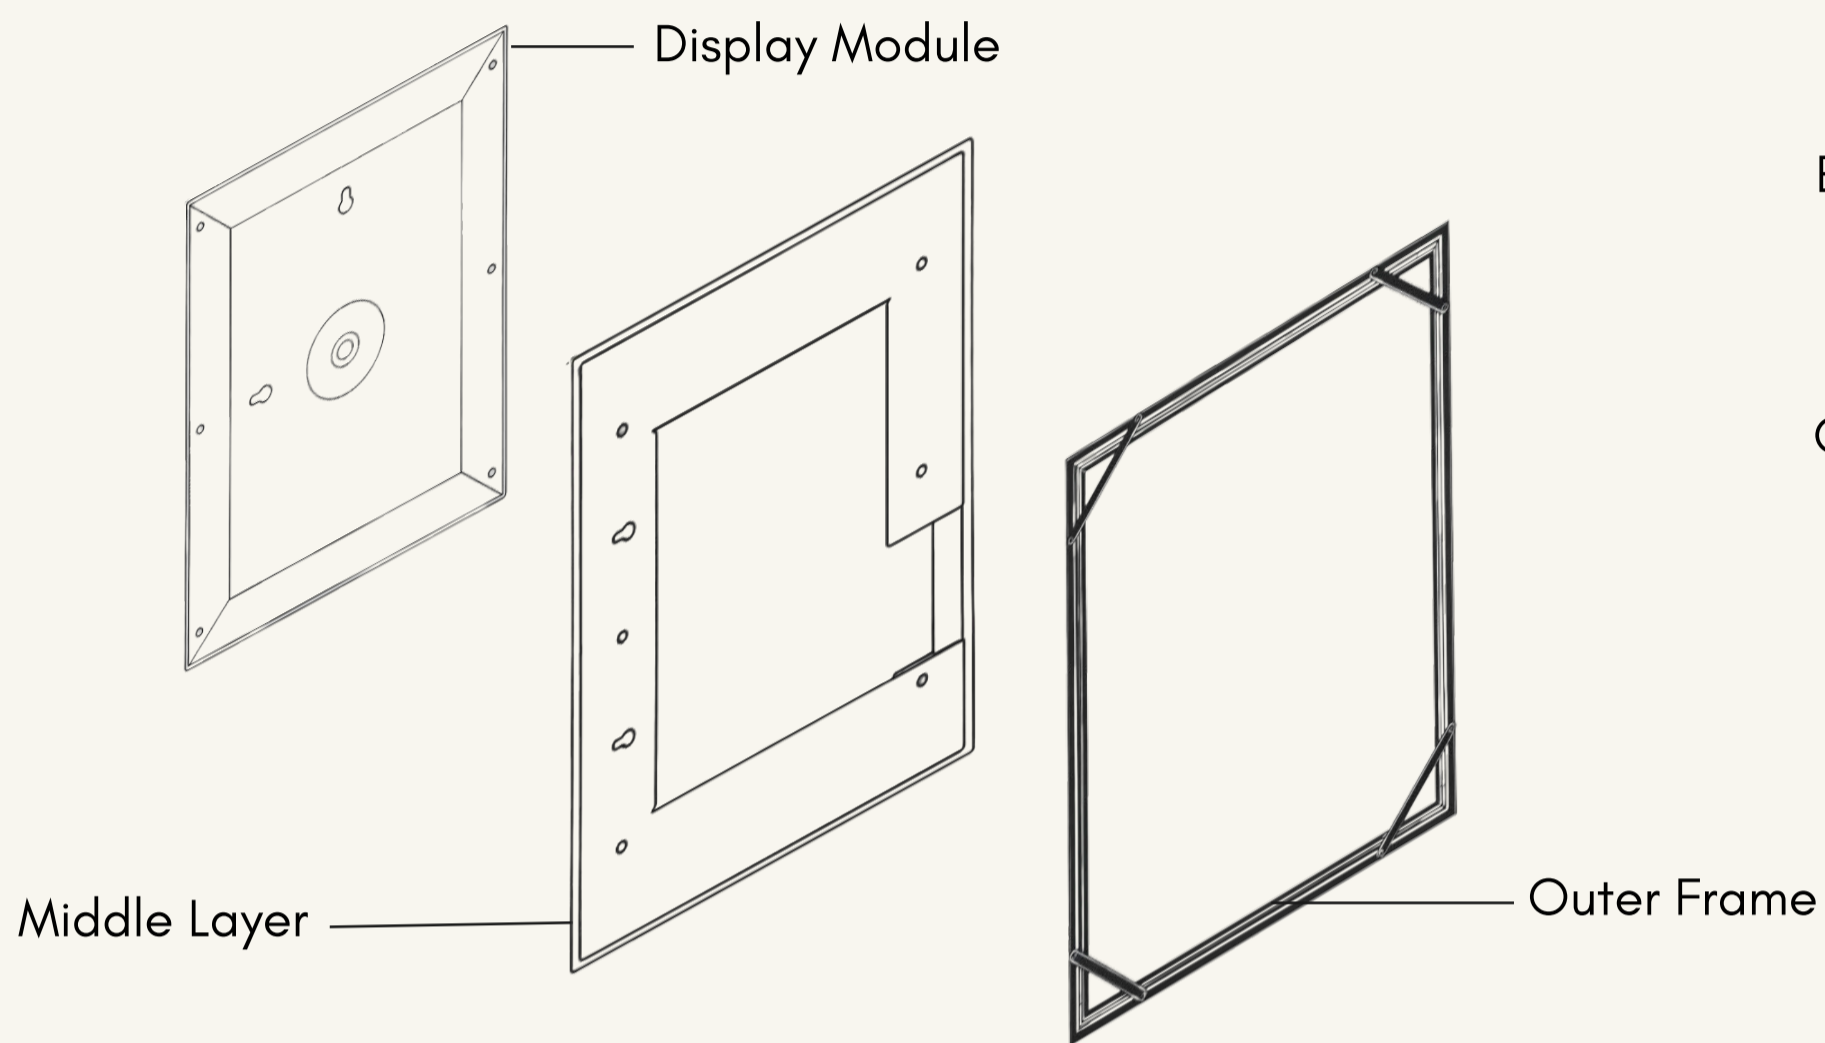

Front view

Modular Design

 *BLOOMIN8 Modular design allows you to freely adapt and match different outer frames.

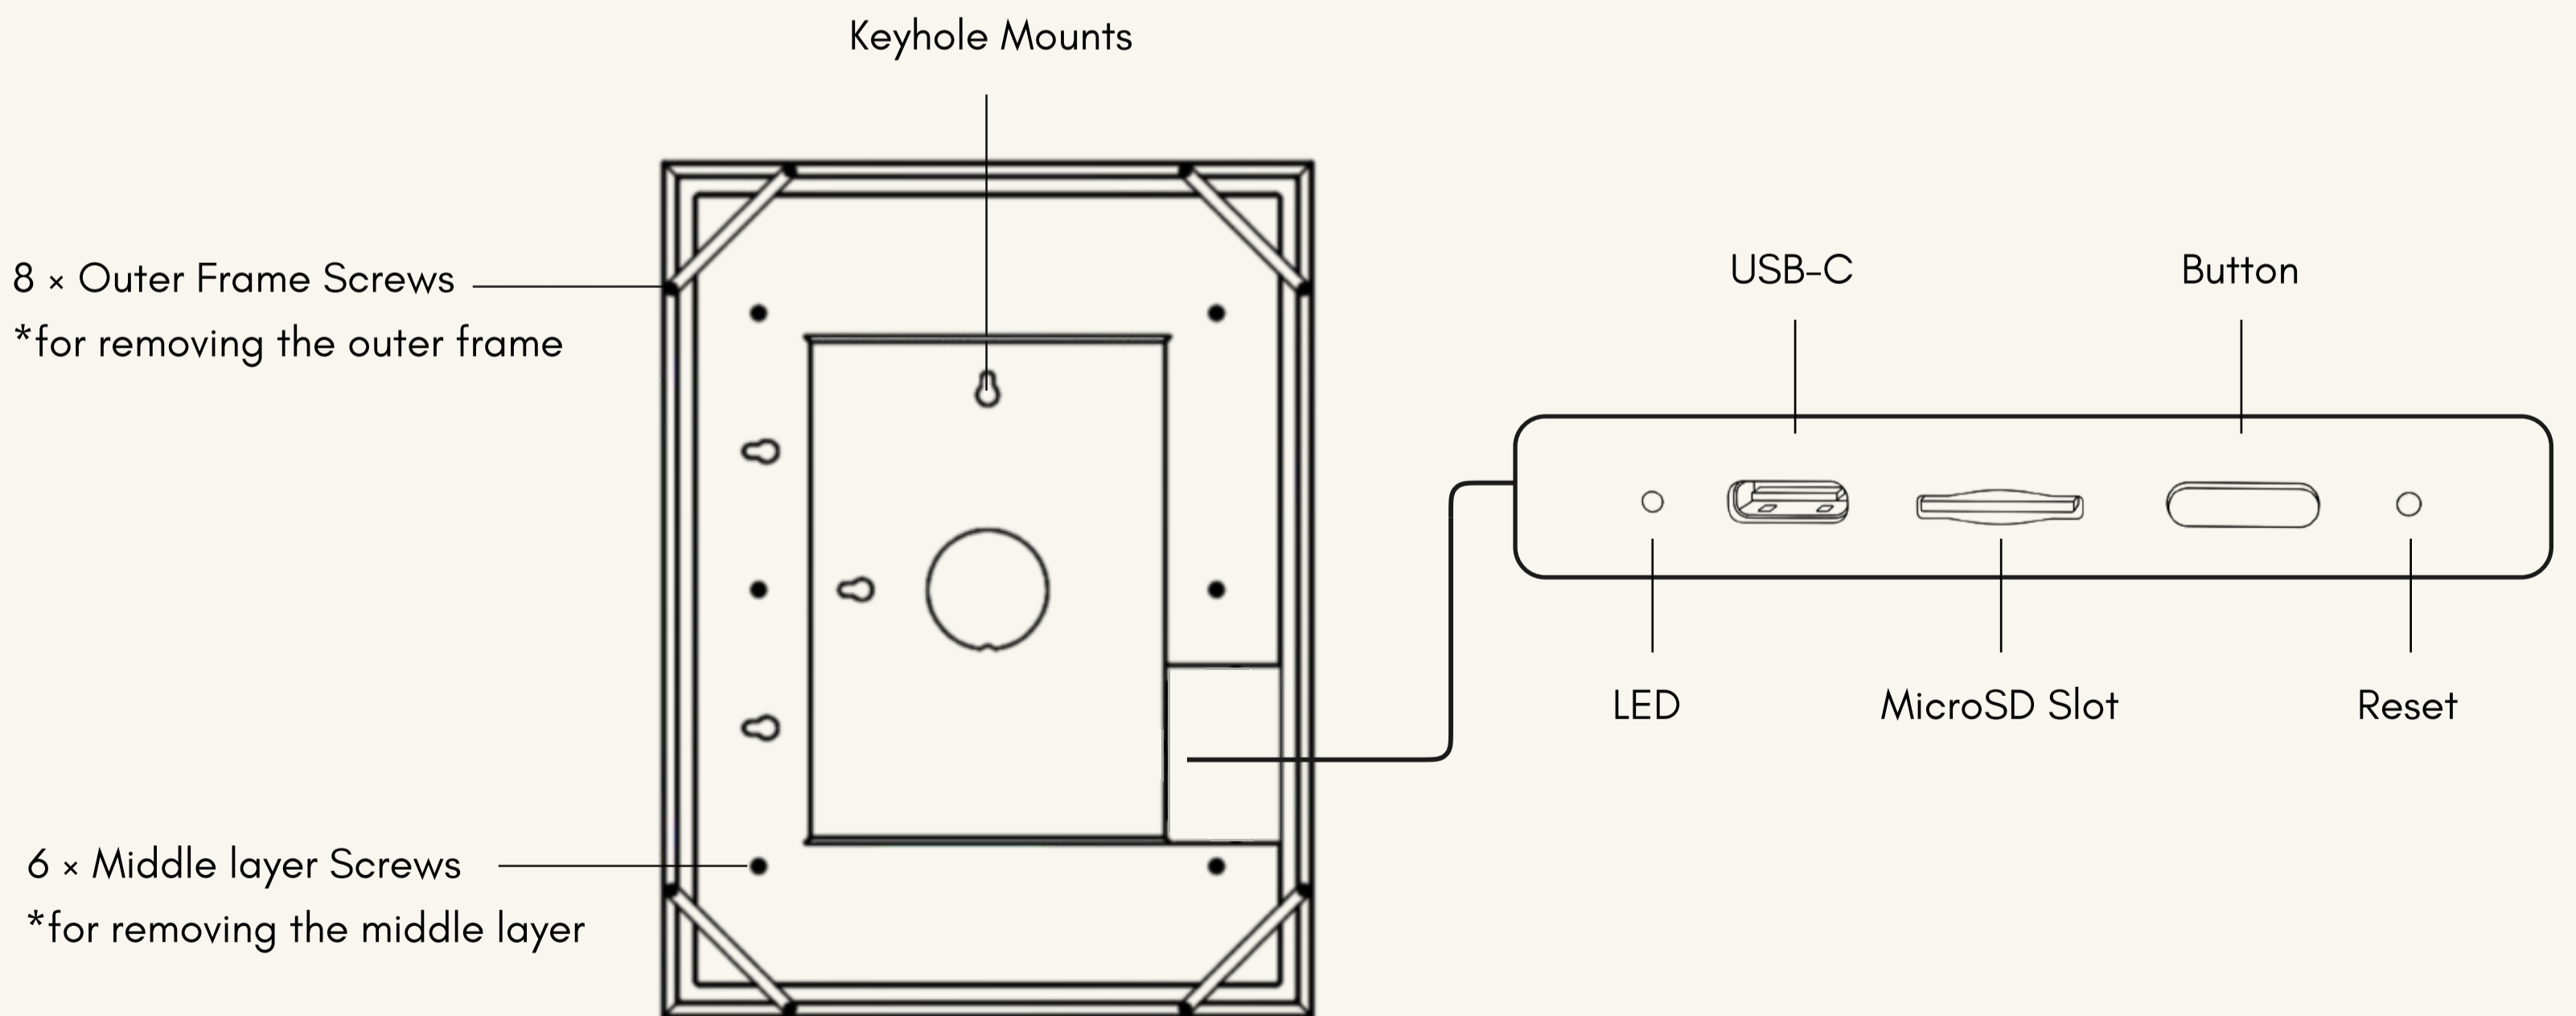


Back view

4. Product Installation

• Position the Canvas

Step 1

 Place the canvas roughly where you want it on the wall and use a pencil to draw a light horizontal line along the top edge.

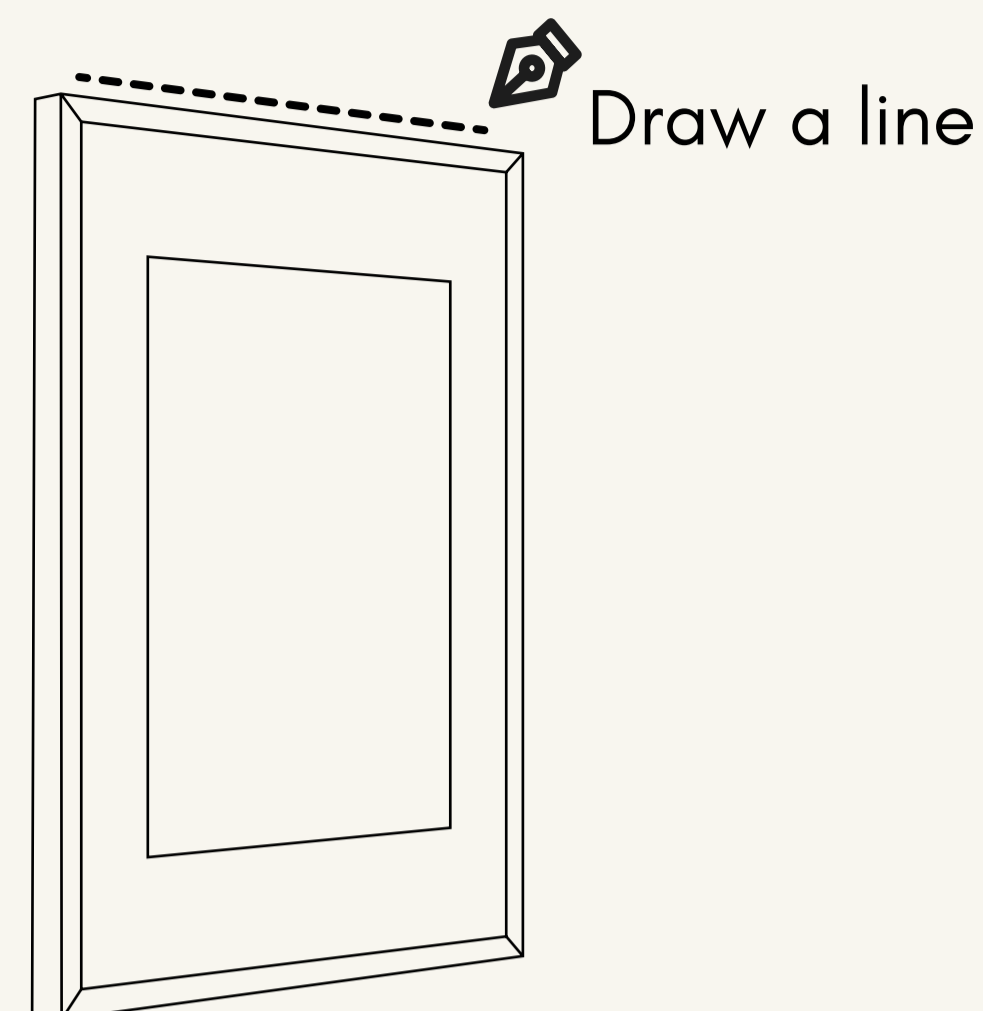


Step 2

From the line, measure

105 mm down for **portrait hanging**

42 mm down for **landscape hanging**

 
(For landscape installation, mark two points according to the keyhole spacing.)
and mark the screw points.

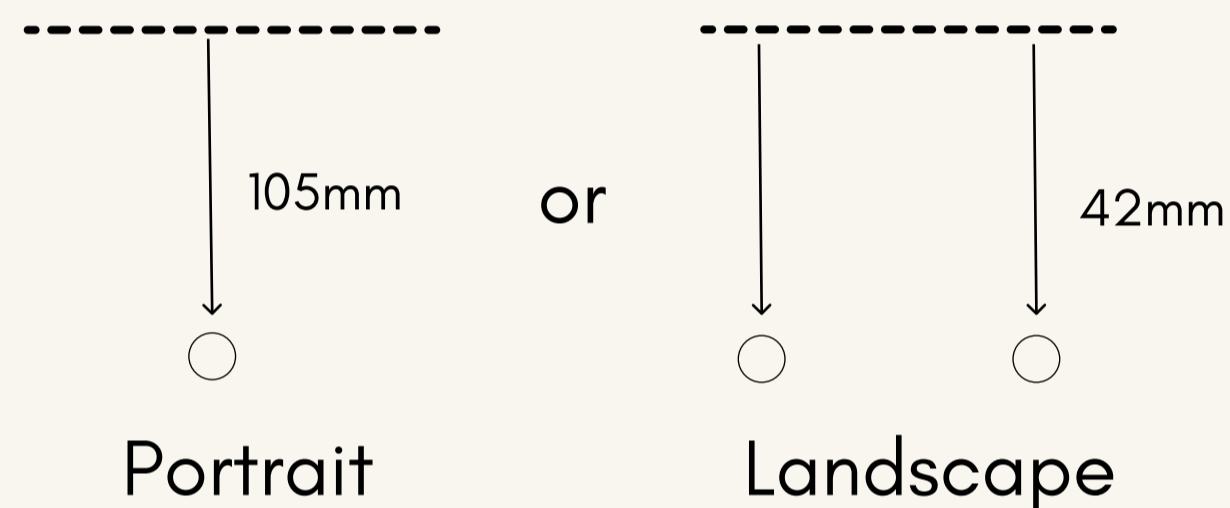

• Drill & Mount


Step 3

 Drill holes ($\Phi 6$ mm) at the marked points, insert wall plugs, then screw in the screws – leaving 4-5 mm of the screw heads exposed.

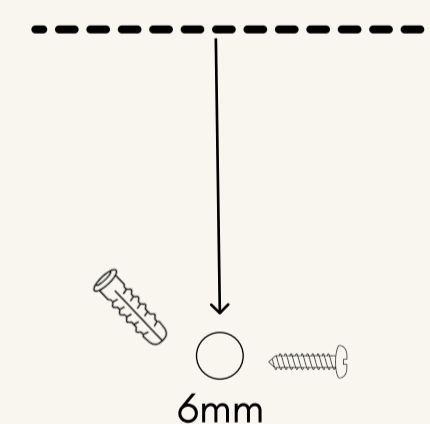

Step 4

 Align the keyhole mounts on the back of the device with the screw heads, then gently slide downward to lock in place.

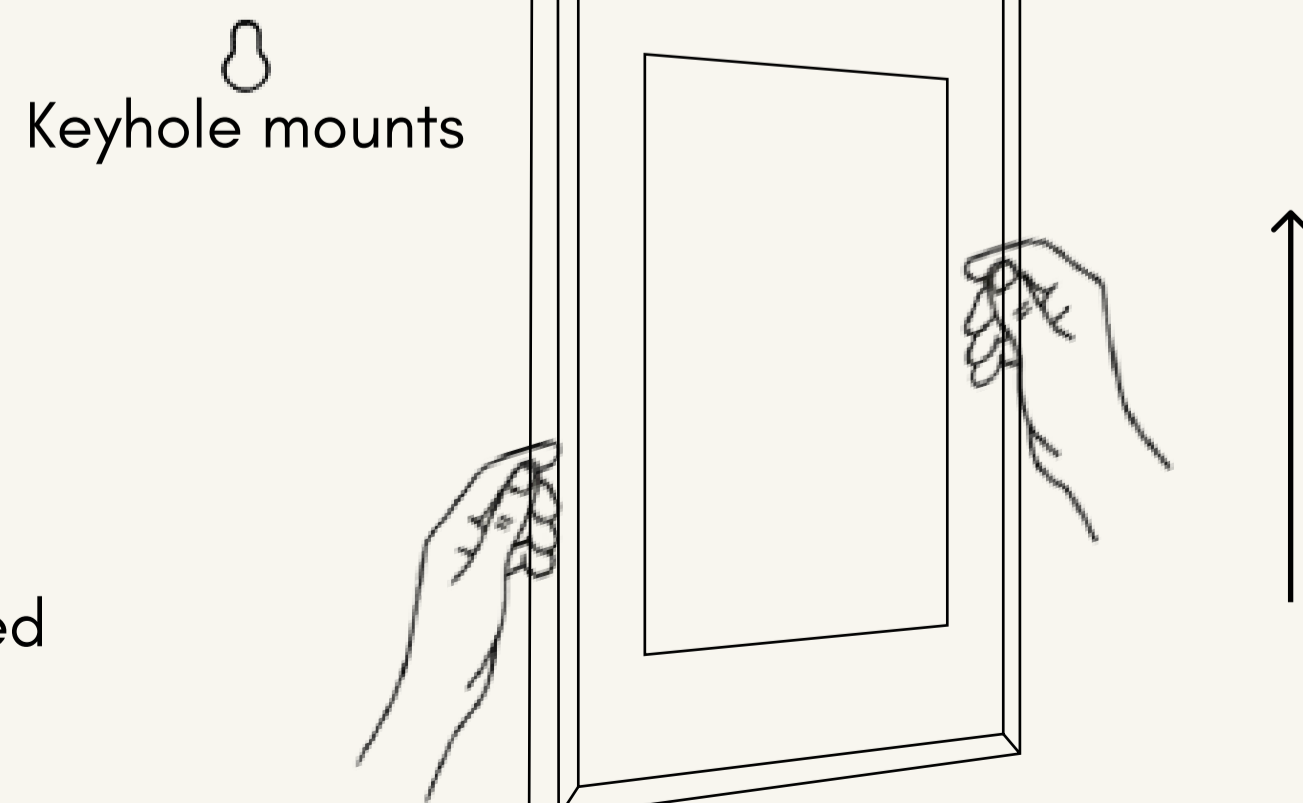

Note: Ensure all wall plugs and screws are securely fastened before hanging the device.

5. Device Status

Status	Bluetooth	Wi-Fi
On (app can connect)	✓	✓
Sleep (app can wake device)	✓	✗
Power Off (needs short press to wake)	✗	✗

6. Button Control

*E-Ink technology allows the display to hold an image with almost no power. So there is no need to turn it off in daily use.

Function	Button	Buzzer
Put to Sleep	Short press 1s	Beep ×2
Wake Up	Short press 1s	Beep ×4 + Refresh display
Power Off	Long press 5s	Beep ×4

Put to Sleep:

Wireless functions turn off when idle but wake automatically when updating images.


Power Off:

All connections are turned off. The device is in deep sleep and cannot wake automatically. Press the button to turn it back on.

7. Indicator Light

Condition	LED Status
Charging	Red
Fully charged	Green

 8. Low Battery


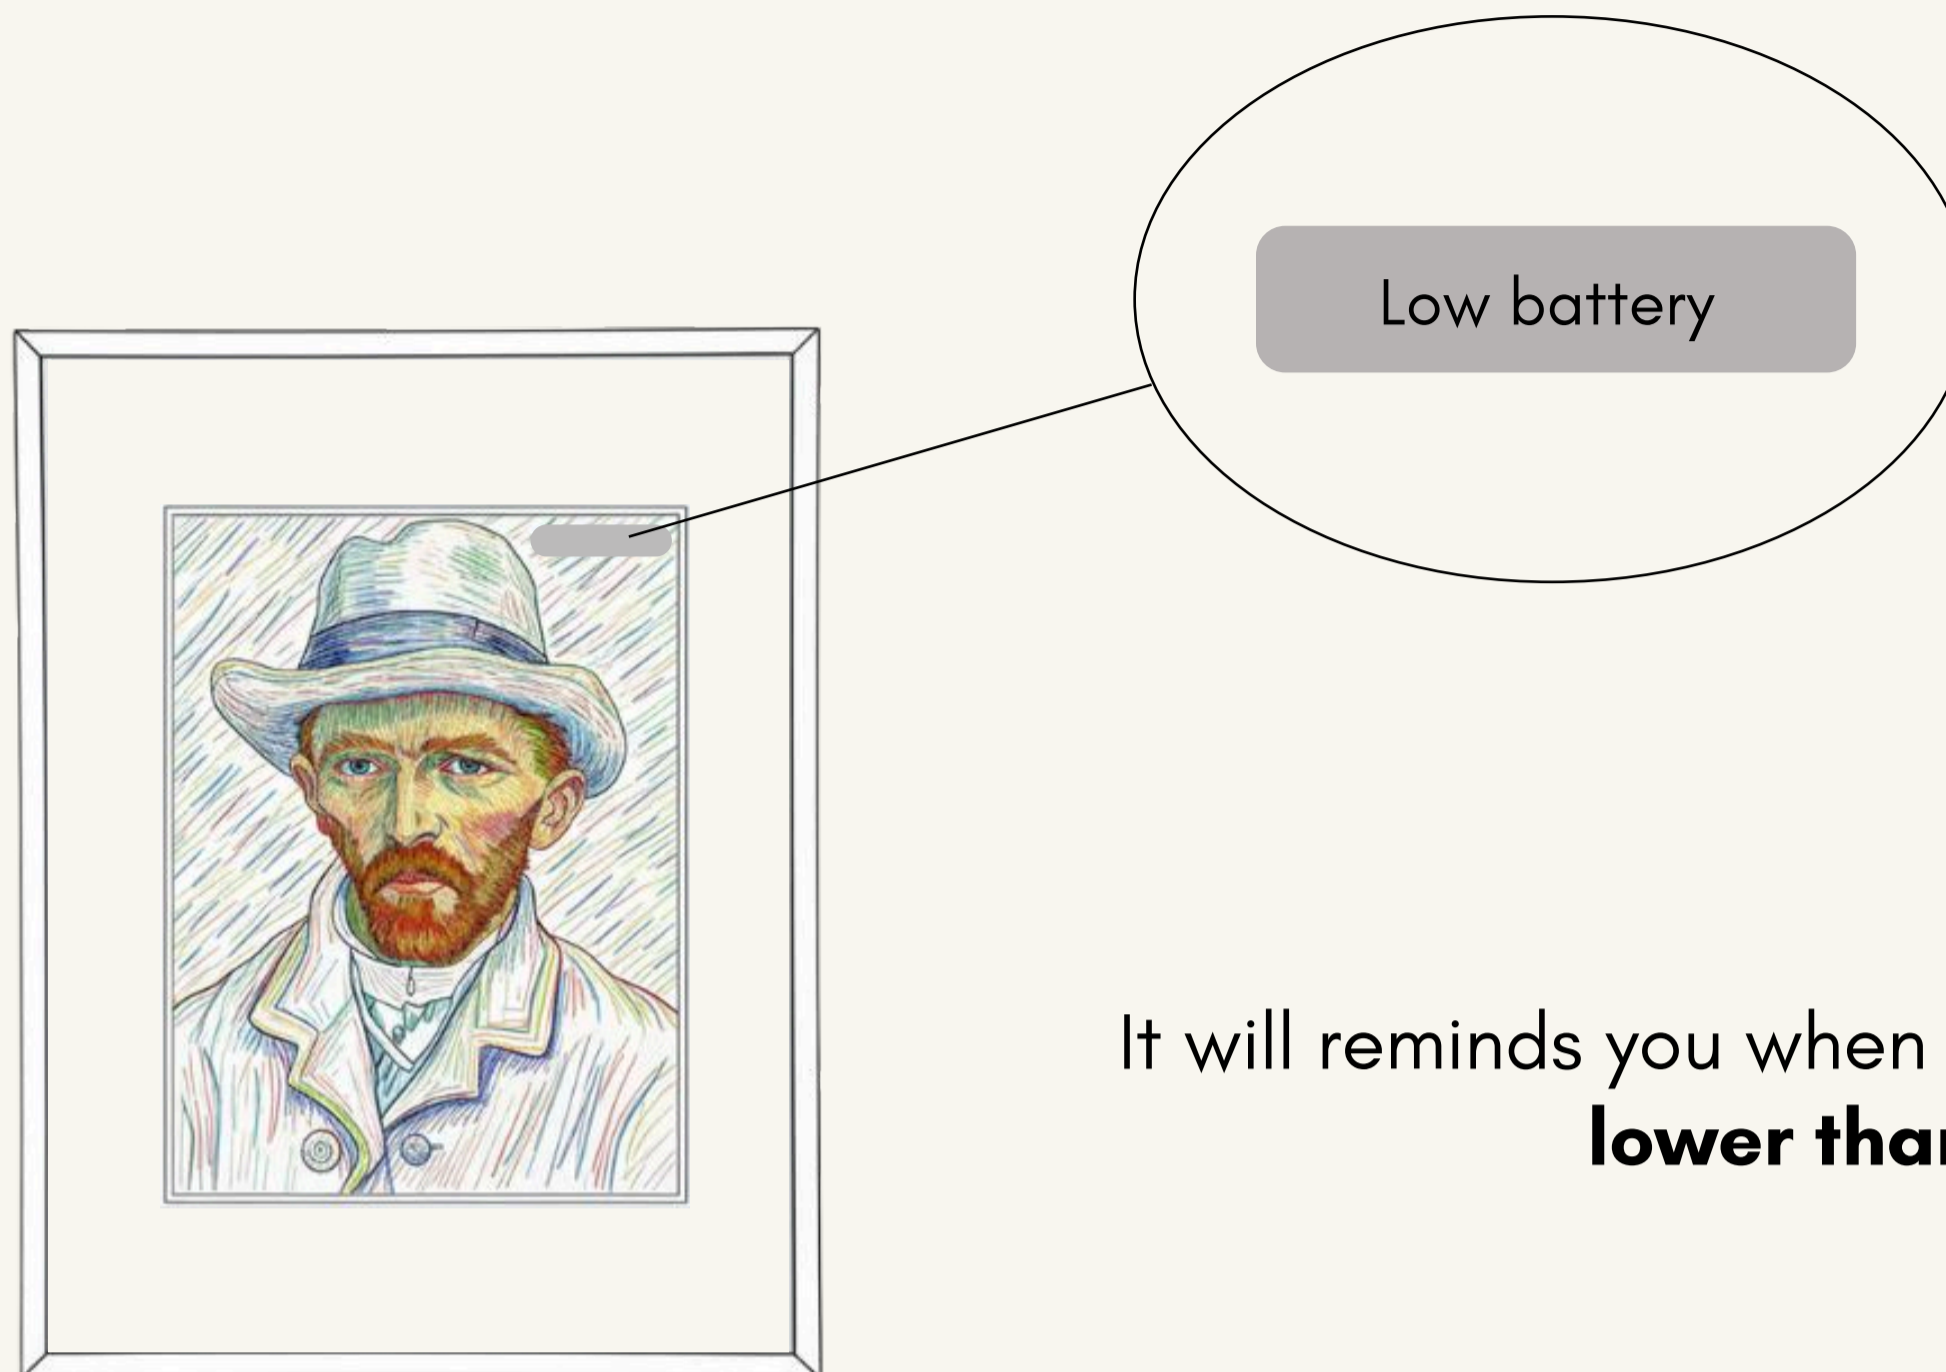


It will remind you when the battery level is **lower than 10%**

9. Connect With The App

Step 1 Download the app

  Search "BLOOMIN8" on App Store or Google Play, then download.

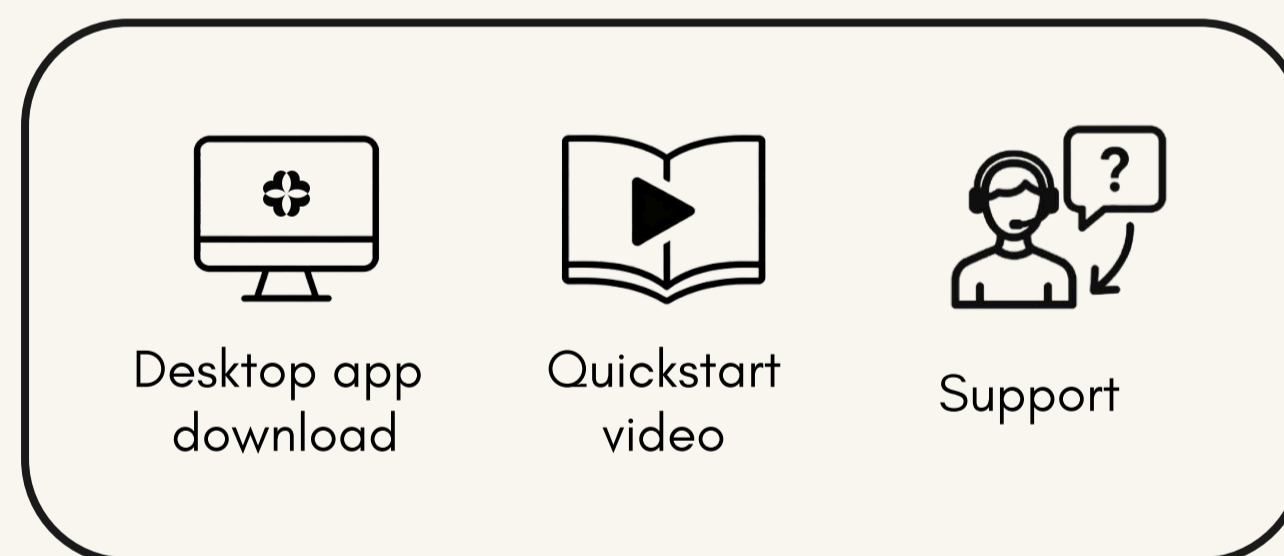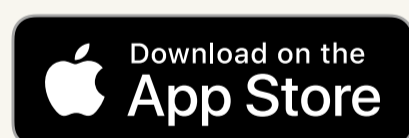

Step 2 Scan the QR code

Open the page and tap **Mobile App** → **Quick start**.



Step 3 Follow the display guide

Add your canvas and complete setup.

10. Maintenance & Care

Cleaning the E-Ink surface

Use a soft, dry microfiber cloth to gently wipe the E-Ink display.

Do not use alcohol, solvents, or any liquid cleaners – moisture may damage the screen.

Frame and matte care

The outer matte border is made of paper material.

Avoid contact with water, humidity, or prolonged sunlight exposure.

If necessary, clean gently with a dry cloth only.

General maintenance

Keep the device away from high humidity, dust, or magnetic interference.

Avoid dropping or pressing the screen surface.

11. Important Safety Instructions

⚠ If you have a history of epilepsy or are susceptible to seizures triggered by flashing or rapidly changing images, avoid staring continuously at the screen during display refreshes. Although E-Ink refreshes infrequently, intermittent image updates may still pose a risk. Consult your doctor before use.

- Use only official or certified power adapters and Type-C cables for charging. Using unapproved chargers may cause fire or electric shock.
- Do not expose the device to water, rain, high humidity or extreme temperatures (0 °C - 50 °C). Prolonged exposure may damage the display or internal electronics.
- Do not drop, bend, or apply pressure to the screen surface or frame. A cracked display or deformed frame cannot be repaired under normal use.
- Unauthorized disassembly, modification or repair attempts may expose you to risk and void the warranty.
- Keep the device and small accessories such as screws, wall plugs and power cables out of reach of children and pets. These parts may present a choking or entanglement hazard.
- It is also recommended to avoid plugging the device into overloaded or ungrounded outlets.
- Long-term storage: If the device is unused for months, allow a full screen refresh every few months to prevent ghosting or residual images.
- Do not press or scratch the E-Ink surface with sharp or pointed objects such as keys or pens – the display is fragile and may crack or deform under pressure.



Find more at
bloomin8.com


support@bloomin8.com

